

YL-100DR

User Manual



BINDTec

Thank you for purchasing YL-100DR. Before operating the machine, please read the user manual for the operation instruction.

<Contents>

1. The name of the part
2. Operate
3. Changing the drills
4. Trouble shootings
5. Cautions
6. Consumables
7. Specifications




warning

1. Make sure that the rated AC voltage complies with the marked AC power beside the product before you plug the power cord in the power inlet.(110,220V /50,60Hz)
2. Do not keep the product in the wet and moist place in order to prevent the danger of fire or electrical damage.
We request you to install the product in the safe place.

1 The name of the parts



<Switch Panel>

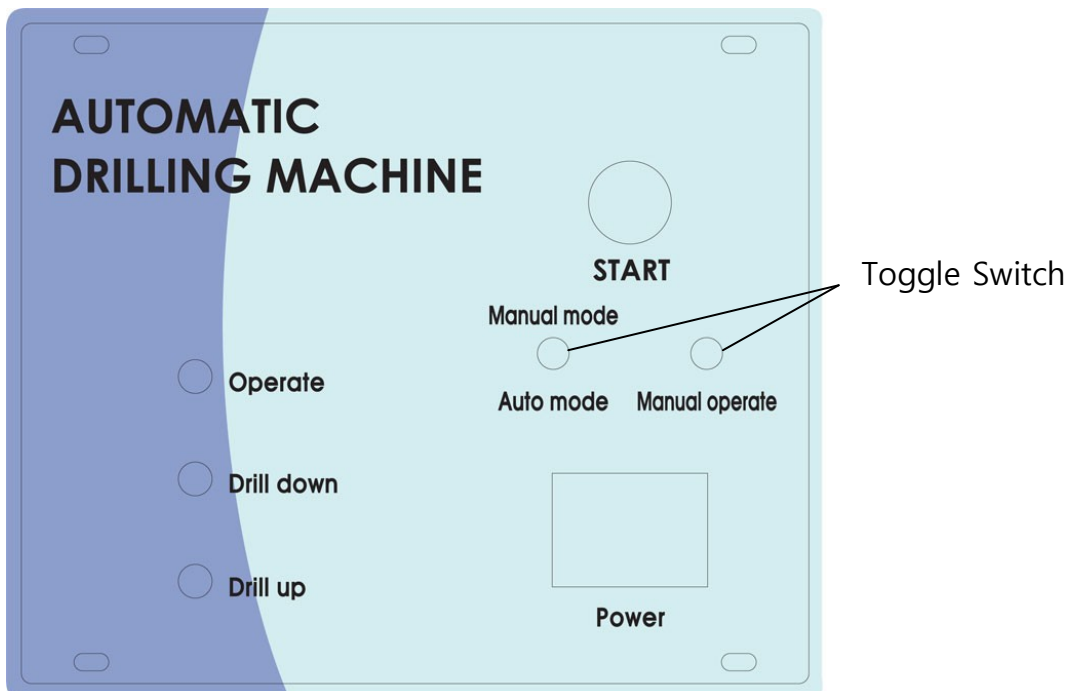

2 Operations

1. Plug the cable.

* **Caution** - Check the voltage : 220V/50Hz

- Check for if there is water or not, place the machine in safe area.

2. Power Switch on.

3. Use the **Toggle switch** to put into **Auto mode**.

4. Place the documents neatly on the **Paper holder**.

5. Press the **START** button to activate the machine.

6. Pus At the end of the whole process, apply force to the **Paper release lever** and press it downwards.

* **Caution**

Do not take out the documents during the drilling process and do not put the hands inside.

3 Changing the drills


***Change time**

The drills need to be replaced if the drills are broken or not sharp enough to drill the documents.

***Change method**

Convert **Toggle switch** to **Manually mode** → Adjust **Manual operate** to lower the drill → Press the **START button** to fully lower the drill and then replace it. (refer figure.1)


Taking out the drills (figure.1)

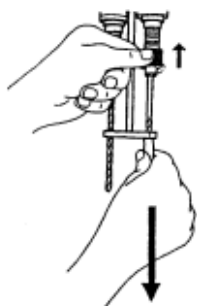

1. Lift the cap and take down the drills.

Caution
Do not take drills roughly by bare hand.

Setting up the drills

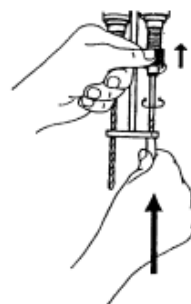

1. Lift the cap and put in the drills.

2. Need to set the grooves of two objects well for successful install.

4 Trouble shootings

*When the machine stops in the middle of drilling process.

- Check the amount of the documents.
- Check the electricity supply the exact voltage.
- Check for any obstacle object disturbing the drilling process.
- Check for the documents whether they are placed properly or not.

* Solve the problem

- 1) Press the Start button to stop the beep sounds.
- 2) Change the function mode from Auto mode to Manual Mode.
- 3) By using the Manual mode to move the lamp light to the Drill up.
- 4) Press the Start button.

⚠ If the problem is still unsolved, needs to call A/S.

5 Cautions

- 1) When drilling paper with stapler pins or clips.


Be careful not to break the drill blade by arranging it as shown in the picture ①.

- 2) When drilling documents with different paper sizes

Arrange the documents as shown in the picture ②.

- 3) When drilling a check or promissory note

The tough areas, such as the paper of the check and promissory note, are difficult to drill, so please strike a balance with the pad insertion as shown in Figure ③.

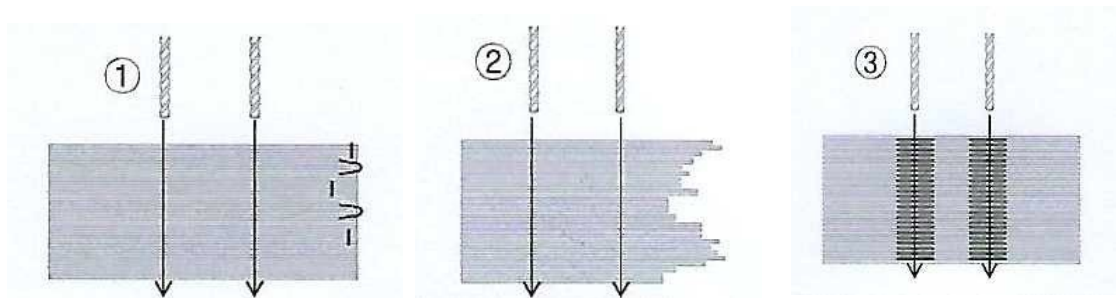

6 Consumables

Drill blade

- Minimum Order Unit:
1set (2pcs)



7 Specifications

Drilling length	~100mm
Drilling distance	50,70mm (option)
Produce size	312(W)×460(D)x 650(H)mm
Power supply	AC 220/230V 50/60Hz 1.6A
Power consumption	250W
Drill blade	2set
Product weight	35.5kg

PRODUCT WARRANTY

BINDTEC CO.,LTD warrants that it will repair and replace parts in accordance with the following terms if any defects in the material or workmanship of the binder occurs within 12 months from the day on which the user purchases it.

A purchase receipt or other evidence of the date of purchase must be shown in order to receive warranty services.

Warranty terms

This warranty is valid only while and if product is used and handled in a normal and reasonable manner in accordance with the User Manual and installation instructions.

Paid services

* Please carefully read the User Manual as you will be charged for any services requested except for product malfunctions guaranteed under the warranty.

* The product is not covered under warranty if damage or defects have occurred due to:

- customer misuse or unauthorized tampering or repairs;
- the replacement of parts other than those designated by BINDTEC CO.,LTD or
- an act of God or the normal service life of any expendable parts being expired.

Model	YL-100DR	Applicable drill	
Date of purchase		Serial no.	
Purchased at			





BINDTEC CO.,LTD.

#1011,177 Sagimakgol-ro, Jungwon-gu,

Seongnam-si,Gyeonggi-do, Korea

TEL : +82 31-734-2868 / FAX : +82 31-734-2869

E-mail : sales@bindtec.kr <http://www.bindtec.kr>